

01-055-1122-0, 01-055-1123-0, 01-055-1136-0,
01-055-1138-0, 01-055-1140-0, 01-044-5803-0, 01-044-5804-0

Februar 2008

February 2008

Anleitung Tankrucksack BMW R 1200 GS

Installation Instruction Tank Bag for R 1200 GS



Lieferumfang:

- 1 x Tankrucksack
- 1 x Kartentasche
- 1 x Platte vorne mit Klett und Haken
- 1 x Platte hinten mit Klett
- 1 x T-Bügel
- 1 x 4mm Distanz
- 2 x Gurte zur Umwandlung in Rucksack

Achtung: Achten Sie vor der Abfahrt darauf, dass der Tankrucksack und die Kartentasche fest sitzen!

Montage:

A - Klett wie in den Abbildungen am Tank aufkleben.

B - Vordere Platte mit den Haken am Schild mit der Fahrgestellnummer befestigen.


C - Die Klettschlaufen der hinteren Platte um den Metallbügel legen und befestigen.

Sollte der Originalbügel nicht mehr vorhanden sein, nutzen Sie den im Lieferumfang des Tankrucksacks enthaltenen T-Bügel.

Für Baujahre ab 2009 nutzen sie bitte den T-Bügel und die 4mm Distanz wie in Bild D.

E - Tankrucksack wie in den Abbildungen befestigen

Bitte achten Sie immer auf festen Sitz. Um Lackschäden auszuschließen, empfehlen wir Ihnen die Verwendung von entsprechender Schutzfolie.

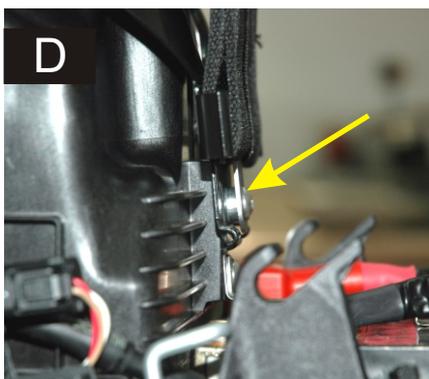

Contains:

- 1 x Tank bag waterproof
- 1 x Map holder
- 1 x Plate front with hooks and velcro
- 1 x Plate rear with velcro
- 1 x T-bracket
- 1 x 4mm spacer
- 2 x Straps for use as backpack

Attention: Make sure the tank bag and the map holder are securely attached prior to each ride!

Installation:

A - Stick the velcro tab on the tank in front of the filler cap.

B - Attach the front plate hooks under the plate with VIN number.

C - Route the rear plate velcro straps around the metal plate right under rider seat and attach them on the velcro plate.

If the original metal plate is not available, use the delivered T-bracket.

For bikes from 2009 on use the T-bracket and the 4mm spacer like in photo D.

E - Attach now the tank bag with turn buckles up front and on the velcro at rear.

Please make sure tank bag is always tightly secured. Suitable clear film can be used to avoid scratches on paint finish.

