


Juli 2004

01-044-0282-0

Anleitung Motorschutz-Zwischenstück BMW R1200 GS

Lieferumfang:

- 1 x Hauptplatte
- 1 x Abstützung
- 2 x Schraube Senkkopf Schlitz M6x16
- 2 x Schraube Innensechskant M6x16
- 4 x Mutter selbstsichernd M6
- 6 x U-Scheibe für M6
- 2 x Lenkerschelle 16mm

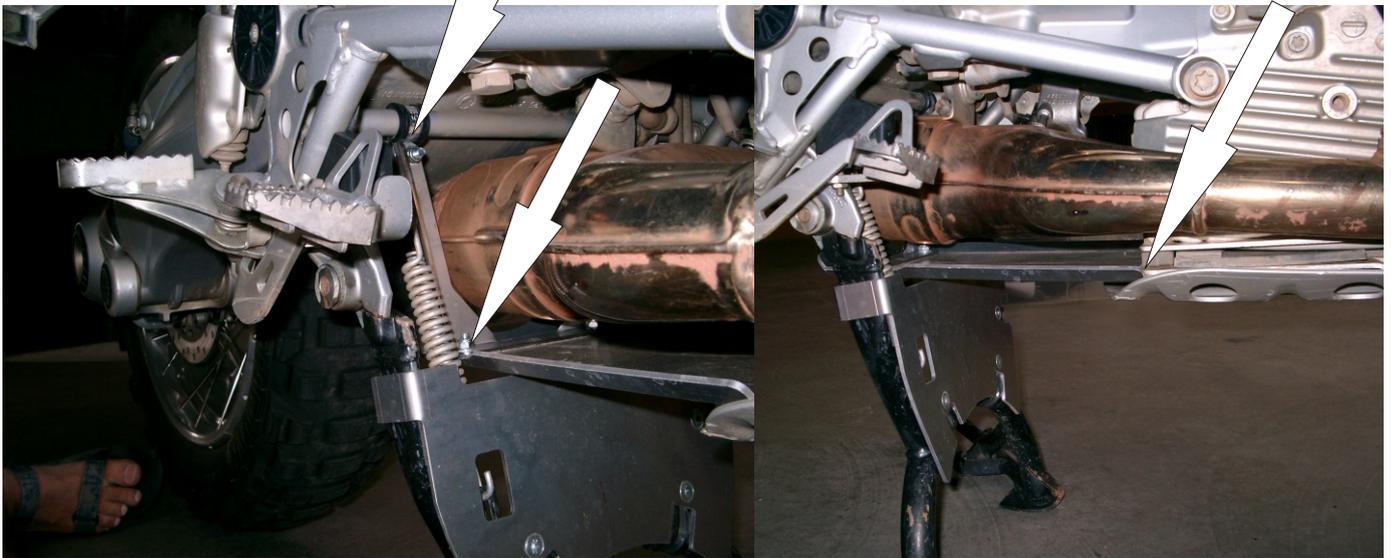

Montage:

Demontieren Sie den original Unterfahrerschutz und schrauben Sie die hinteren Gummimetalelemente heraus. Schrauben Sie diese nun anders herum wieder ein, so dass der längere Gewindebolzen nach unten weist.

Jetzt die Abstützung auf der Hauptplatte mit 2x Senkkopfschrauben M6x16, je einer U-Scheibe und je einer Mutter selbstsichernd mit dem kurzen Winkel nach vorne verschrauben.


Die Lenkerschellen um das Querrohr oberhalb des Auspuffsammlers legen.

Original Motorschutz wieder vorne anschrauben und Zwischenstück zwischen Motorschutz und Gummimetalelement schieben und wieder verschrauben.

Die Abstützung mit den M6x16 Innensechskantschrauben M6x16, zwei U-Scheiben für M6 und zwei Muttern selbstsichernd M6 an den Lenkerschellen verschrauben.

Jetzt alle Schraubverbindungen gleichmäßig festziehen.

Nach ca. 50 km Fahrt alle Schrauben kontrollieren und gegebenenfalls nachziehen.

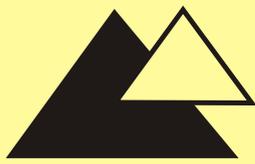


Juli 2004

01-044-0282-0 **Installation Instructions** **Motor Guard Intermediate Plate R1200 GS**

Contains:

- 1 x Motorguard Intermediate Plate
- 1 x U-shaped Alum. support
- 2 x Domehead Screw M6x16
- 2 x Countersunk Screw M6x16
- 4 x Nylock nut M6
- 6 x Washer M6
- 2 x Rubberized pipe clamp 16mm

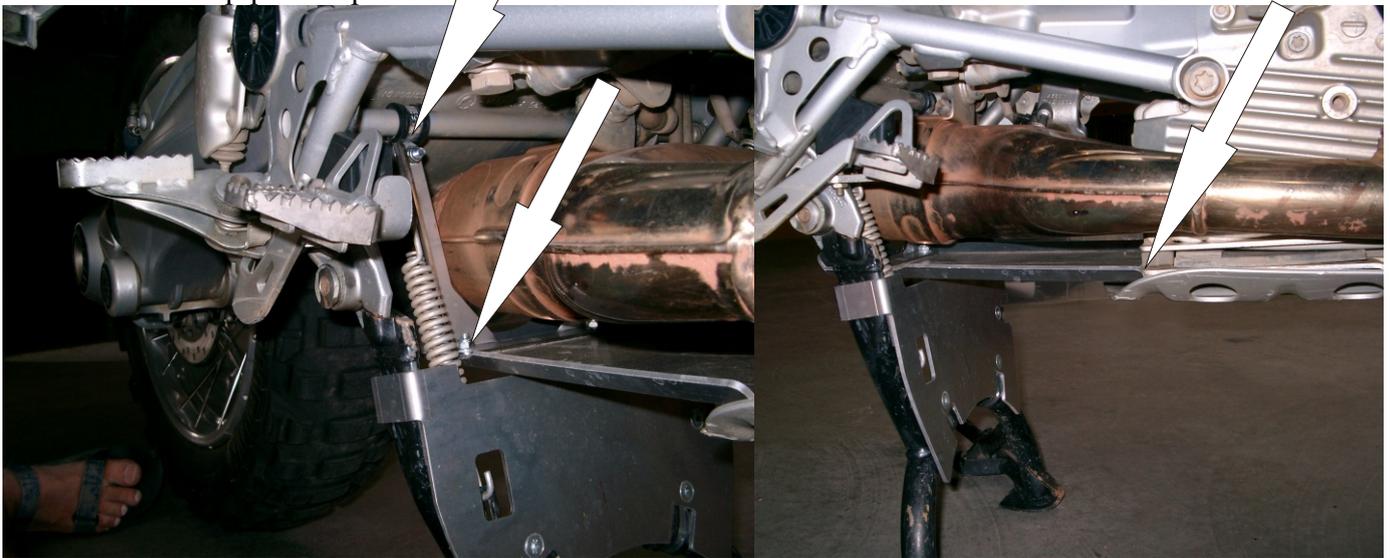

Installation:

First attach the U-shaped alum. support on the motorguard intermediate plate with the two M6x16 countersunk screws, M6 washers and M6 nylock nuts.

Put the rubberized pipe clamps on the tube that is quer accross under paralever joint.

Loosen the rear BMW motor guard attachment bolts. Turn them around so that the longer side of the thread shows downwards. Push the Touratech intermediate plate between the BMW motor guard and the rubber mounts. (or between BMW motor guard and Touratech motor guard reinforcement 044-0300 if installed).

Retighten the rear BMW motor guard attachment bolts.

Attach the U-shaped alum. support on the rubberized pipe clamps with the M6x16 domehead screws, M6 washers and m6 nylock nuts.

Check the tightness of all nuts and bolts.