

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

September 2002

01-053-0031-0

01-053-0033-0

**Anleitung
Hard Parts ZC**

Lieferumfang:

2 x Kofferverstärkung Hard Parts ZC

16 x Blechschraube 5,5x22


16 x Unterlegscheibe

Montage:

Hutmuttern und Handräder entfernen, anschließend die darunter liegenden Befestigungsschrauben der oberen Befestigungen entfernen. Die Kofferverstärkung auf die Gewindespindeln schieben und mit den mitgelieferten 5,5x22 Blechschrauben verschrauben (Unterlegscheiben nicht vergessen). Anschließend Handräder und Hutmuttern wieder anschrauben und die Koffer wie gewohnt am Kofferträger befestigen.



Sehen Sie auch in unseren Katalog oder im Internet unter WWW.TOURATECH.DE.

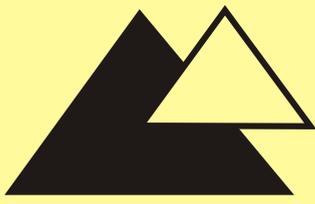

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

September 2002

01-053-0031-0

01-053-0033-0

Instruction

Hard Parts ZC

Contents:

2 x pannier reinforcement Hard Parts ZC

16 x tapping screw, 5.5x22

16 x washer

Assembly:

Remove the cap nuts and hand wheels, then remove the securing bolts for the upper mountings which are located underneath them. Fit the pannier reinforcement onto the threaded spindles and secure using the supplied 5.5x22 tapping screws (not forgetting the washers!) Then refit the hand wheels and cap nuts and secure the panniers to the pannier rack in the usual way.



Sehen Sie auch in unseren Katalog oder im Internet unter WWW.TOURATECH.DE.

These instructions are at our present level of knowledge. Legal requirements do not exist. Technical issues subject to change.